 


Radio Receiver Information: Am I being controlled?

Green light – Radio is active and receiving a signal but NO load is being controlled.

This can be on or off at any time and is used for testing only.

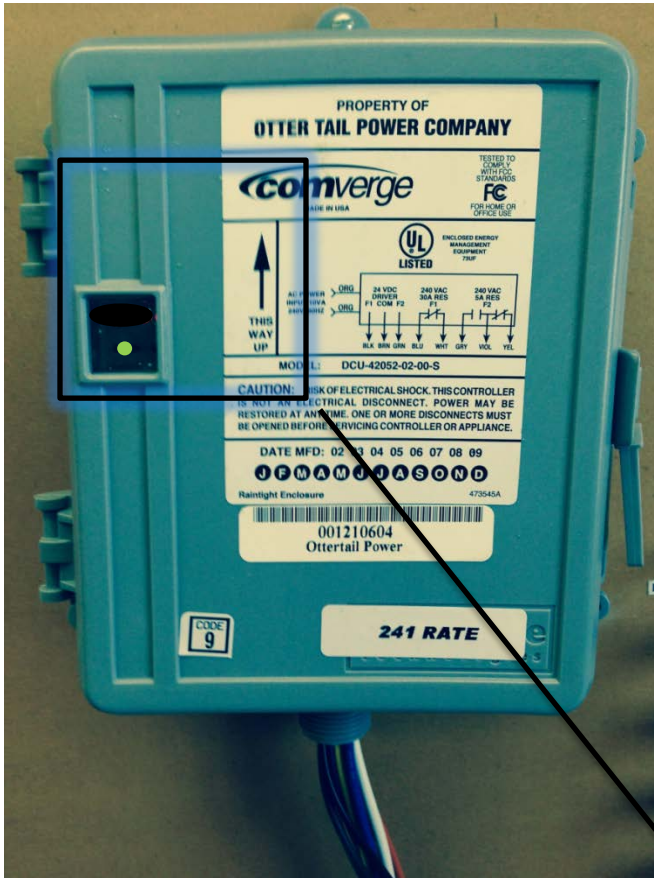

Depending on the customer's rate - **RED indication** lights have different meanings.

RDC rate:

Summer only

Left **RED light** indicates water heater is being controlled.



Winter only

Right **RED light** indicates RDC unit is controlling all loads. Water heater is included in this control.



Dual Fuel OR Deferred rates:

Left **RED light** indicates water heater is being controlled.



Right **RED light** indicates electric heating/cooling is being controlled.



Both **RED lights** indicate water heater and electric heating /cooling are being controlled.



Air Conditioning rate:

Right **RED light** indicates electric A/C is being controlled.

 


Commercial Time of Use rate:

Right **RED light** indicates on-peak rate has started.

Customer has a choice:

Customer can manually control load shedding or use an automatic control system.

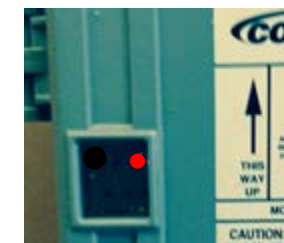

Irrigation controlled rate:

Both **RED lights** will be on during the control period.

Customer has a choice:

Customer can manually control load shedding or use an automatic control system.



Dual Fuel Alert rate:

Left RED light indicates the control period will start in one hour.



Right RED light indicates the control period has started.

